

ENDURO Assembly Instructions

Remove the original battery mount from the rear of the PIX240 recorder using a small (#0 or #1) phillips screwdriver to remove the four corner screws. Gently separate the battery plate from the PIX recorder. FIG 1

Prepare the **enduro** battery plate for installation by first removing the security shipping label from the power cable and discard.

Separate the **enduro power accessory** from the battery adapter by removing the 4 Phillips attachment screws. The **enduro** power cable has extra length to facilitate ease of assembly. Separating the **enduro** from the battery adapter gives you easier access to attach the power cable.

NOTE: This procedure is the same for installing an IDX V-Lock or Anton/Bauer battery adapter. Extend the two pin power cable prior to attaching to the left power receptacle on the PIX recorder.

VERY IMPORTANT!!!

CAREFULLY, guide the two pin PCB board onto the matching two pin socket within the PIX Recorder. FIG 2, 3 and 4

Once the PCB pins are PERFECTLY aligned with the PIX socket, Press the PCB board fully into the socket until fully seated. FIG 3 & 4

If the power connector does not glide into the socket, RECHECK the PIN to SOCKET Alignment. Do Not Force the assembly!

Align and attach the **enduro power accessory** to the PIX recorder with 4 - 30mm screws(supplied) FIG 5

Guide the excess power cable into the inside cavity of the battery adapter. Attach and secure battery adapter to the **enduro power accessory** with the 4 - 12mm screws that were removed in step # 2. FIG 6

