



# Installing the EnduroPower Accessory for Odyssey7

## Assembly Overview

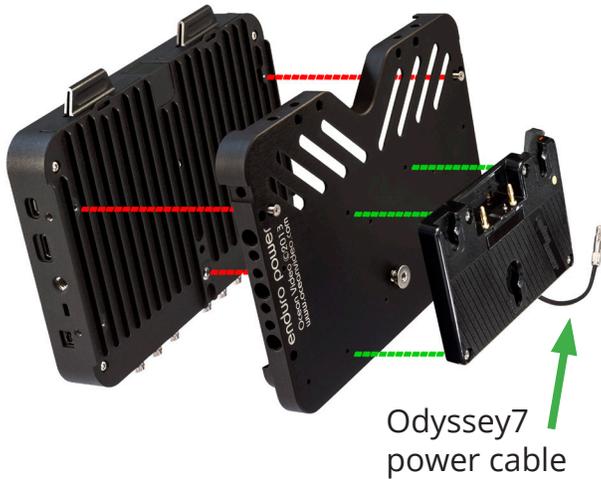

## Parts List:

- 1 - Allen Wrench
- 1 - 1/4" flat head screw
- 2 - 3mm flat head screws
- 4 - 3mm pan head screws

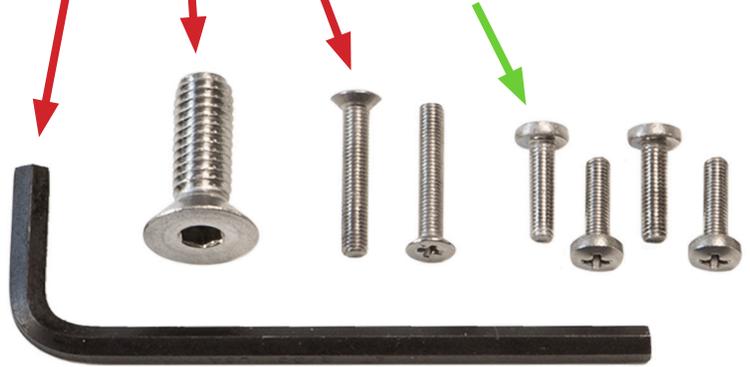

**Additional tools required for assembly:**  
Phillips Screwdriver

**1.** Place the EnduroPower bracket on the rear of the Odyssey7 . Secure the bracket with 1/4" flat head screw and tighten with Allen Wrench provided. Attach two 3mm flat head screws and secure with Phillips screwdriver.

**2.** Position the battery plate over the threaded holes and secure with four 3mm pan head screws. (Note: the photo shows an AntonBauer battery adapter, the installation of the IDX battery adapter will be similar.) Align and insert the power cable into the power input on the Odyssey7 until it locks into place.

